

WARNING
 ASSEMBLY ALL CONTAMINANTS, INCLUDING WATER, ARE REMOVED FROM FUEL AND FUEL SYSTEM BEFORE FLIGHT. FUEL AND NEED ALL SAFETY INSTRUCTIONS AND OWNERS ADVISORIES PANEL OF LIGHT CAN RESULT IN SERIOUS INJURY OR DEATH.

WARNING
 FAILURE TO TAKE OFF AND LANDING ALL SAFETY INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH.

LANDING SPEED 103 KIAS

Instrument panel with speed gauges (0-100 KIAS), altimeter (0-10000 FT), and various indicator lights including: AIR, ALT, DIR, FUEL, OIL, TEMP, VIB, and others.

Control panels for COM (COM1, COM2), AUDIO (AUDIO, FUEL, FUEL, FUEL), and M. MOVES (MAGNETIC ON, L. AT, R. AT, START, FRAME, START).

WARNING
 FRONT HEATER MUST BE REMOVED WHEN OPERATING BELOW 40°F MINIMUM TEMPERATURE. SEE INTERCOM.COM/COMPONENTS FOR MORE INFORMATION.

Fuel selector and engine control panels including: FUEL SELECTOR (LEFT, RIGHT), ENGINE CONTROL (FUEL ON, FUEL OFF), and engine gauges (FUEL, OIL, TEMP).

EC1 and EC2 control panels with indicator lights.

Rudder trim and Aileron trim controls with labels: RUDDER TRIM (NOSE DOWN, NOSE UP, LEFT, RIGHT), AILERON TRIM (L, R), and NOSE UP/DOWN.

Fuel selector diagram showing fuel flow from tanks to the engine.