



YOKO+

USER'S MANUAL
Rev. 1.0 - October 2018

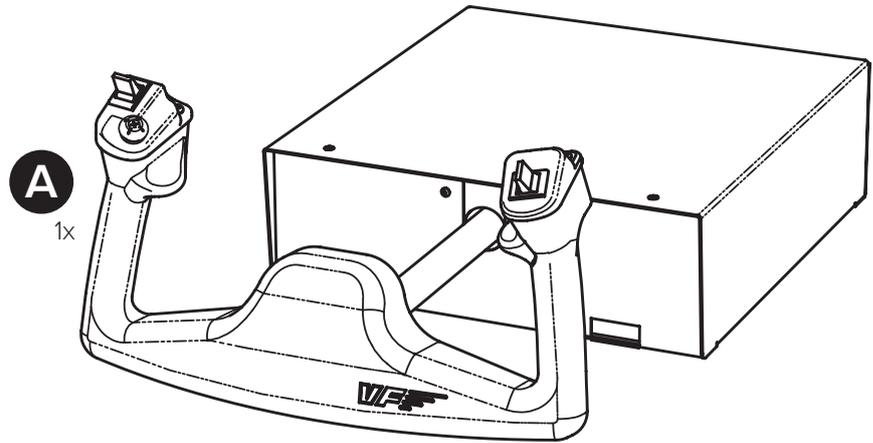

1. PACKAGE LIST


- A) YOKO+
- B) USB cable
- C) Yoko Clamp
- D) Clamping knobs

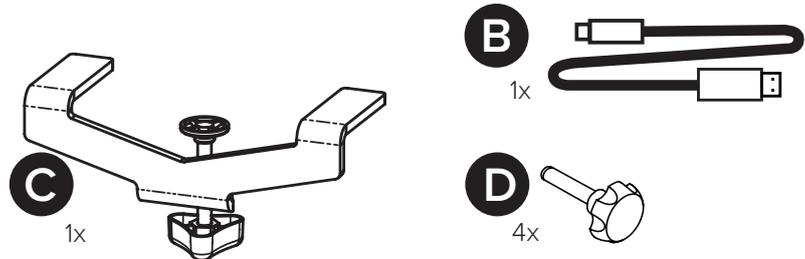



2. ASSEMBLY

2.1. Clamp the YOKO+ in the desired place with the clamp (C).


Please find other clamp solutions in our website (www.virtual-fly.com/shop/accesorios/yoko-clamp).

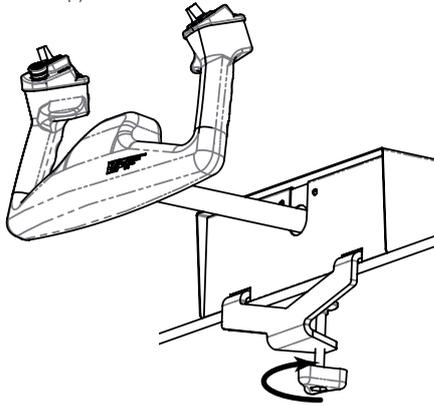

2.2. In case you have specific support, screw the YOKO+ with the clamping knobs (D). You can find the CUT-OUT measures in DXF format in our DOWNLOADS YOKO+ section: <https://www.virtual-fly.com/en/downloads>

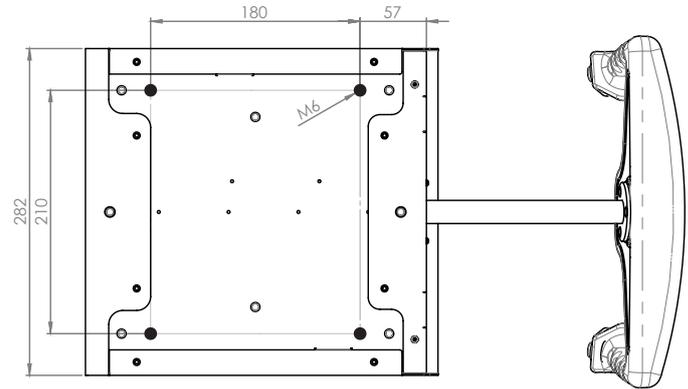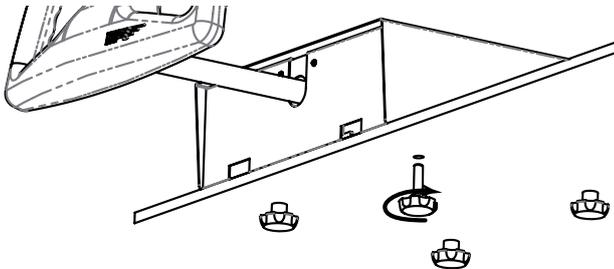

2.3. Connect the USB cable (B) between the rear connector of YOKO+ and the computer where the flight simulator software is running. It is not necessary the calibration on windows because the device is calibrated from factory.

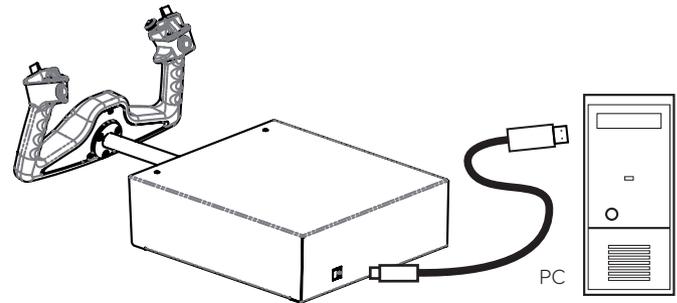

3. CALIBRATION ON WINDOWS




Calibration on windows is not necessary because the device is calibrated from factory, but you can use the calibration Windows tab to test the device.

4. CONFIGURATION ON FLIGHT SIMULATION SOFTWARE

As the YOKO+ control interacts with any computer as a normal HID device (Joystick), this makes it compatible with any FLIGHT SIMULATOR software. The following tables tell you how to configure the YOKO+ on the most popular FLIGHT SIMULATOR software, FSX-Prepar3D and X-Plane.

FSX-Prepar3D

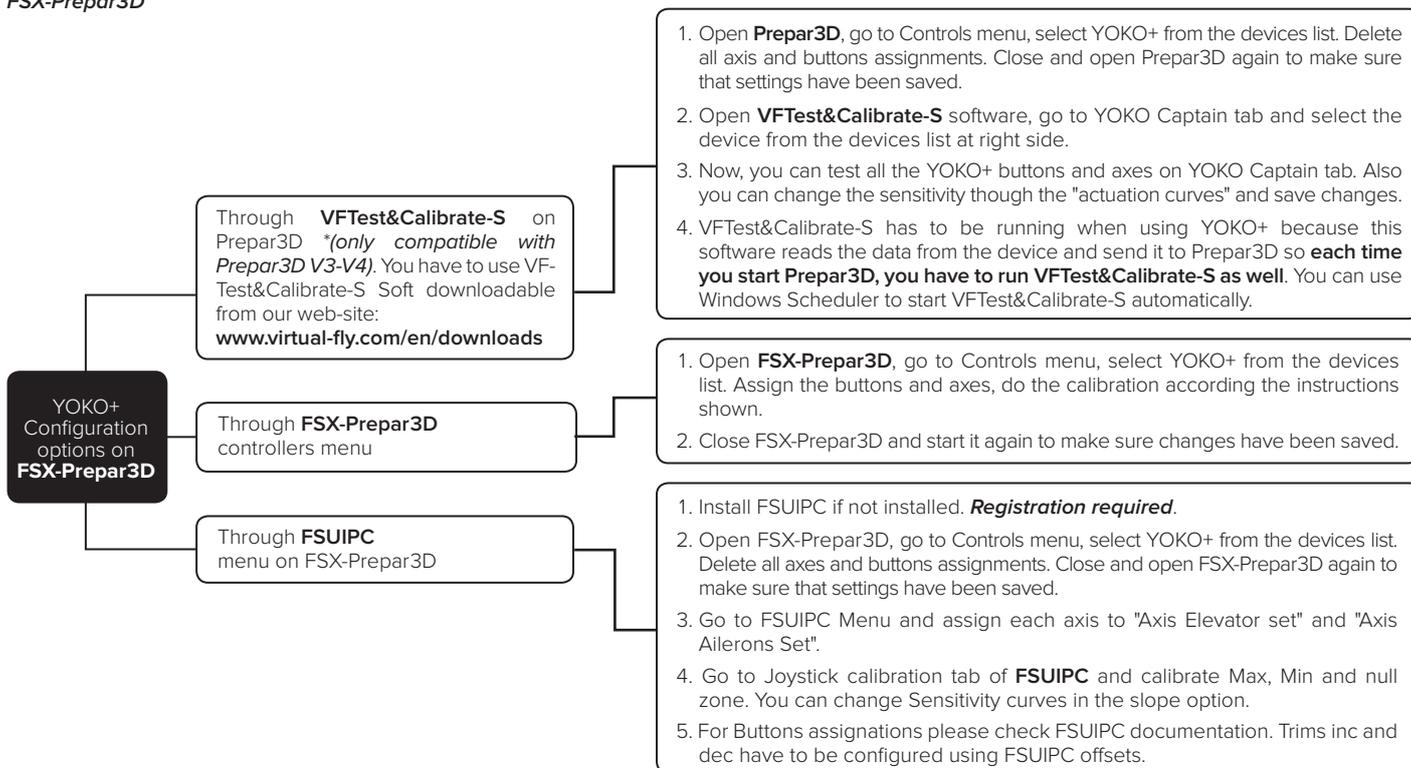

X-Plane

